




INSTRUCTION MANUAL

FBA-10 ELECTRIC GUITAR AMPLIFIER

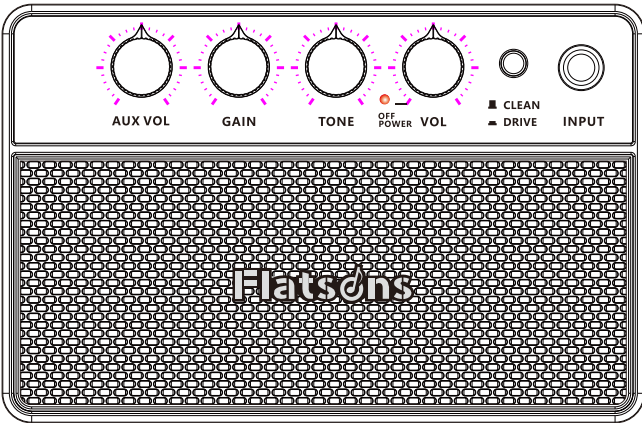

Contents

ISED Statement	01
FCC Warning	02
English	03
Français	09

ISED Statement

- English: This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada’s licence-exempt RSS(s). Operation is subject to the following two conditions:
(1) This device may not cause interference.
(2) This device must accept any interference, including interference that may cause undesired operation of the device.

- French: Cet appareil contient des émetteurs/récepteurs exempts de licence qui sont conformes aux CNR exempts de licence d’Innovation, Sciences et Développement économique Canada. Le fonctionnement est soumis aux deux conditions suivantes:
(1) Cet appareil ne doit pas causer d’interférences.
(2) Cet appareil doit accepter toute interférence, y compris les interférences susceptibles de provoquer un fonctionnement indésirable de l’appareil.

Cet équipement est conforme Canada limites d’exposition aux radiations dans un environnement non contrôlé.
Cet équipement doit être installé et utilisé avec une distance minimale de 0 cm entre le radiateur et votre corps.

FCC Warning

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.

Warranty

If there is any question about the use of the gear, you can contact our brand after-sales staff.

We will solve your problem until it is resolved.

- ◆ 1-Year Warranty
- ◆ 24/7 Online Support

Staff via email: [service@flatsonsaudio.com]
If any questions related to orders, please contact the seller through the shopping platform.


Safety Instructions

1. There is a high-gain distortion amplifier. It will produce whistling when the gain volume was adjusted too much. Please adjust the placement of the amplifier. Avoid facing the speaker directly with the guitar.
2. When not using this product, please turn off the power switch.
3. This machine has a built-in lithium battery, please do not store the battery without electricity for a long time or it will significantly reduce the life of the battery. When you find this product is low power and shut down, it should be charged in time. If you do not use it for a long time, please store the product fully charged.
4. Built-in 3.7V/2000mAh lithium battery can be rechargeable to use. It will take about 3 hrs to fully charging. It supports 5V/1A charging for maximum.

Detailed Safety Instructions

1. This product has a built-in lithium battery, please do not disassemble it by yourself.
2. Don't use it in the rain, water, or damp areas, don't drop it in water or other liquid substance into this product.
3. Please avoid dropping the machine or bumping it on the surface of hard objects to avoid damage to the machine.
4. Do not collide, throw or vibrate this product.
5. Please use a clean dry cloth to clean the product. Don't clean with inflammable substances such as benzene, thinner detergent, and so on.
6. Do not open this equipment or attempt to disassemble its internal parts or make any modifications to it. This product doesn't contain any spare parts for users to do it yourself.
7. When using the headphones, please adjust the volume starting from low to avoid damaging the headphones or hurting your ears.
8. Don't dump this product with household garbage. Proper treatment can reduce pollution and health hazards.

Product Parts

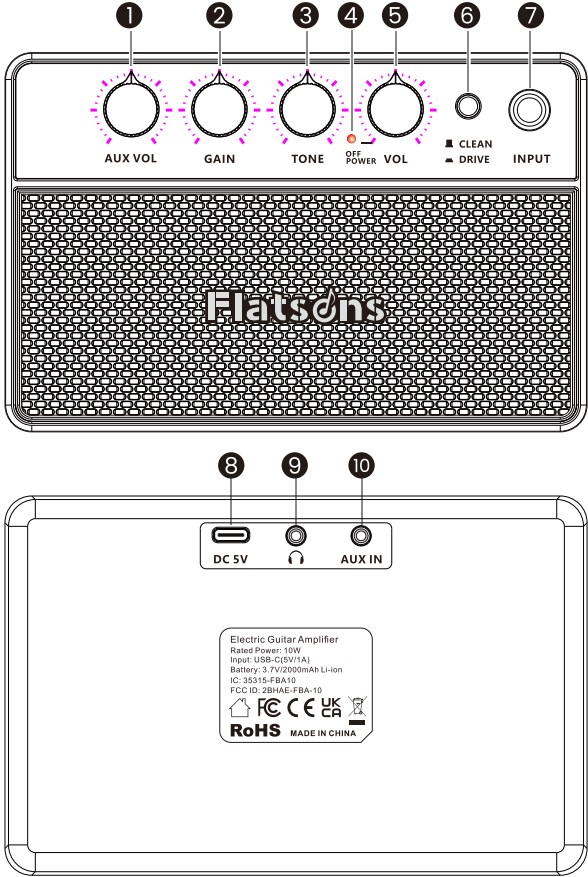

Product Parts & Functions

- 1 Wireless/AUX VOL: AUX Volume Knob
- 2 GAIN: Gain Control
- 3 TONE: Tone Control
- 4 INDICATOR LIGHT: Charging Indicator
- 5 VOL(OFF/POWER): Power ON/OFF, Input Volume Control
- 6 CLEAN/DRIVE: Tone Selector Switch(CLEAN/DRIVE) and Status Indicators
- 7 INPUT: Input connector
- 8 DC 5V: USB-C Charging Port
- 9 : Headphone Output connector
- 10 AUX IN: Auxiliary Input Connector

Product Parameters

Rated power: 10W
Headphone: 30Ω
Input impedance: 1MΩ
Auxiliary Input Impedance: 10KΩ
Battery: 3.7/2000mAh
Speaker Impedance: 4Ω
Power supply: DC 5V/A(USB-C)
Dimensions: 152(L)×75(W)×99(H)mm
Weight: 580g

Packing Lists

Electric Guitar Amplifier ×1
USB-A to USB-C Charging Cable ×1
Product Manual ×1

7<EN>

How to Use

- 1. Turn on the VOL knob, and turn on the power clockwise, the CLEAN/DRIVE indicator shows green/red when it is working.
- 2. Connect the electric guitar to the INPUT interface, you can choose the tone by the CLEAN DRIVE switch and change the GAIN/TONE/VOL to adjust the tone and volume.
- 3. You can stream music from Wireless. Turn on the wireless network of the device, search for “FBA-10” in the list, and pair with it, the indicator tone “connected” after a successful connection.
- 4. AUX IN connector can be wired to an external audio source to play music.
- 5. PHONES jack allows you to connect headphones when you need to play or practice quietly.
- 6. The charging port can be used to charge the product with the USB-A to USB-C charging cable.
- 7. If the battery power is too low, the charging indicator light is red, please charge it in time, it shows a blue color when charging and goes out when fully charged.

8<EN>

Garantie

Si vous avez des questions concernant l'utilisation de l'appareil, vous pouvez contacter notre personnel après-vente.

Nous résoudrons votre problème jusqu'à ce qu'il soit réglé.

- ◆ Garantie 1 an
- ◆ Assistance en ligne 24h/7j

Contact par email: [service@flatsonsaudio.com]
Pour toute question relative aux commandes, veuillez contacter.

Consignes de sécurité

- 1. Il s'agit d'un amplificateur à distorsion à haut gain. Un sifflement (larsonnement) peut se produire si le gain ou le volume est trop élevé. Veuillez ajuster l'emplacement de l'amplificateur. Évitez de diriger le haut-parleur directement vers la guitare.
- 2. Lorsque vous n'utilisez pas ce produit, veuillez éteindre l'interrupteur d'alimentation.
- 3. Cet appareil contient une batterie lithium-ion intégrée. Ne stockez pas la batterie déchargée pendant une longue période, car cela réduirait considérablement sa durée de vie. Lorsque le produit est faible et s'éteint, il doit être chargé rapidement. Si vous ne l'utilisez pas pendant une longue période, veuillez le stocker avec une batterie complètement chargée.
- 4. La batterie lithium-ion intégrée de 3,7 V/2000 mAh est rechargeable. La charge complète prend environ 3 heures. La charge maximale supportée est de 5V/1 A.


9<FR>

Consignes de sécurité détaillées

- 1. Ce produit contient une batterie lithium-ion intégrée. Ne pas démonter vous-même.
- 2. Ne pas utiliser sous la pluie, dans l'eau ou dans des zones humides. Ne pas immerger ni laisser pénétrer de liquide dans l'appareil.
- 3. Éviter de faire tomber l'appareil ou de le heurter contre des surfaces dures pour ne pas l'endommager.
- 4. Ne pas cogner, jeter ou soumettre ce produit à des vibrations.
- 5. Nettoyer le produit avec un chiffon propre et sec. Ne pas utiliser de solvants inflammables comme le benzène, le diluant ou des détergents.
- 6. Ne pas ouvrir l'appareil, tenter de démonter ses parties internes ou le modifier. Ce produit ne contient aucune pièce réparable par l'utilisateur.
- 7. Lors de l'utilisation d'un casque, commencez toujours avec un volume bas pour éviter d'endommager le casque ou votre ouïe.
- 8. Ne pas jeter ce produit avec les ordures ménagères. Un traitement approprié réduit les risques de pollution et les dangers pour la santé.

10<FR>

Pièces etfonctions

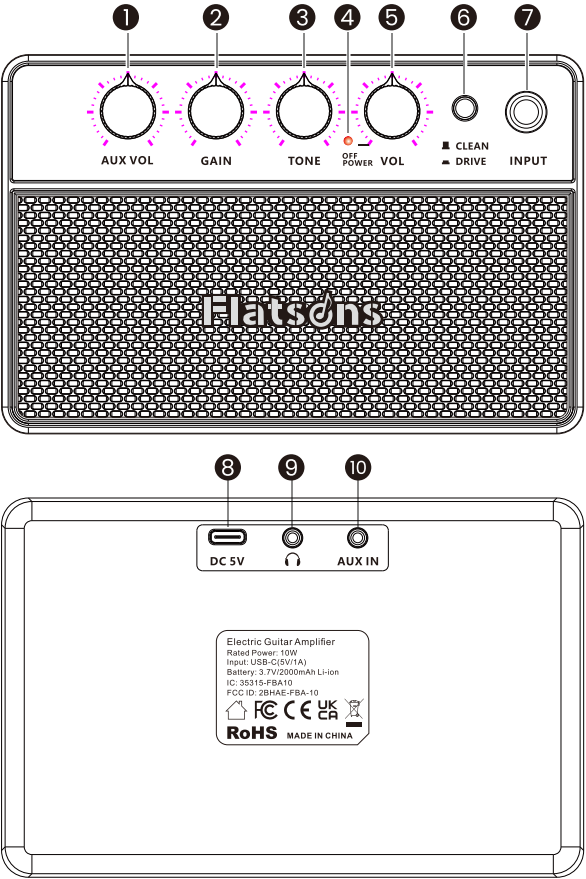

11<FR>

Pièces et fonctions du produit

- 1 Wireless/AUX VOL: Bouton de volume AUX(entrée auxiliaire)
- 2 GAIN: Contrôle du gain
- 3 TONE: Contrôle de la tonalité
- 4 INDICATOR LIGHT: Voyant de charge
- 5 VOL(OFF/POWER): Marche/Arrêt, Contrôle du volume d'entrée(guitare)
- 6 CLEAN/DRIVE: Sélecteur de sonorité (CLAIR/SATURÉ) et voyants d'état
- 7 INPUT: Connecteur d'entrée (guitare)
- 8 DC 5V: Port de charge USB-C
- 9 : Prise casque (sortie)
- 10 AUX IN: Prise d'entrée auxiliaire

Caractéristigues du produit

Puissance nominale: 10W
Casque: 30Ω
Impédance d'entrée: 1MΩ
Impédance d'entrée auxiliaire: 10kΩ
Impédance du haut-parleur: 4Ω
Batterie: Li-ion 3,7 V/2000 mAh
Alimentation: DC 5V/1A (USB-C)
Dimensions: 152 (L)×73 (l)×99 (H)mm
Poids: 580g

Contenu de l'emballage

Amplificateur pourguitare électrique ×1
Câble de charge USB-A vers USB-C ×1
Manuel du produit ×1

12<FR>

Comment utiliser

- 1. Tournez le bouton VOL (5) pour allumer l'appareil (dans le sens des aiguilles d'une montre). Le témoin CLEAN/DRIVE (6) s'allume en vert/rouge lorsque l'appareil fonctionne.
- 2. Branchez la guitare électrique sur l'entrée INPUT (7). Vous pouvez choisir la sonorité avec le sélecteur CLEAN/DRIVE (6) et ajuster le gain, la tonalité et le volume d'entrée avec les boutons GAIN (2), TONE (3) et VOL (5).
- 3. Vous pouvez diffuser de la musique sans fil (Bluetooth). Activez le réseau sans fil de votre appareil, recherchez "FBA-10" dans la liste et appairez-le. Une tonalité "Connecté" retentira après une connexion réussie.
- 4. La prise AUX IN (10) permet de connecter une source audio externe par câble pour diffuser de la musique.
- 5. La prise PHONES (9) vous permet de brancher un casque lorsque vous devez jouer ou travailler en silence.
- 6. Le port de charge (8) peut être utilisé pour charger le produit avec le câble de charge USB-A vers USB-C fourni.
- 7. Si la batterie est trop faible, le voyant de charge (4) est rouge, veuillez la recharger rapidement. Le voyant devient bleu pendant la charge et s'éteint lorsque la charge est complète.

13<FR>

Flatsons

THANK YOU FOR TRUSTING
AND CHOOSING FLATSONS



To connect directly with our support team

- ✉ service@flatsonsaudio.com
- 🔗 https://flatsonsaudio.com